
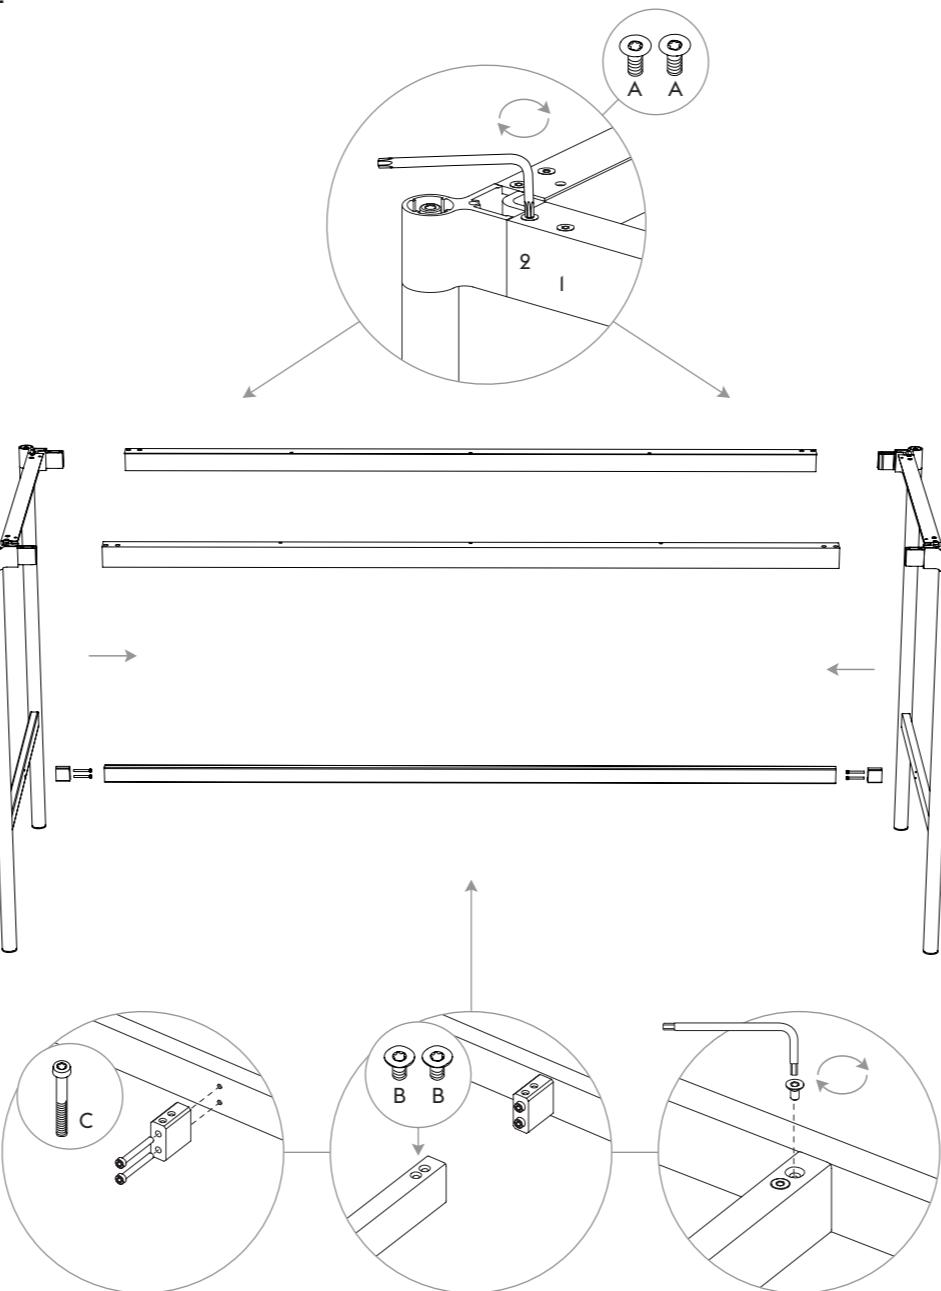


BASE HIGH TABLE

— Mika Tolvanen

- 1 Please be aware that the holes will not align perfectly. Begin by fastening the screw in position I, which is the furthest from the corner.

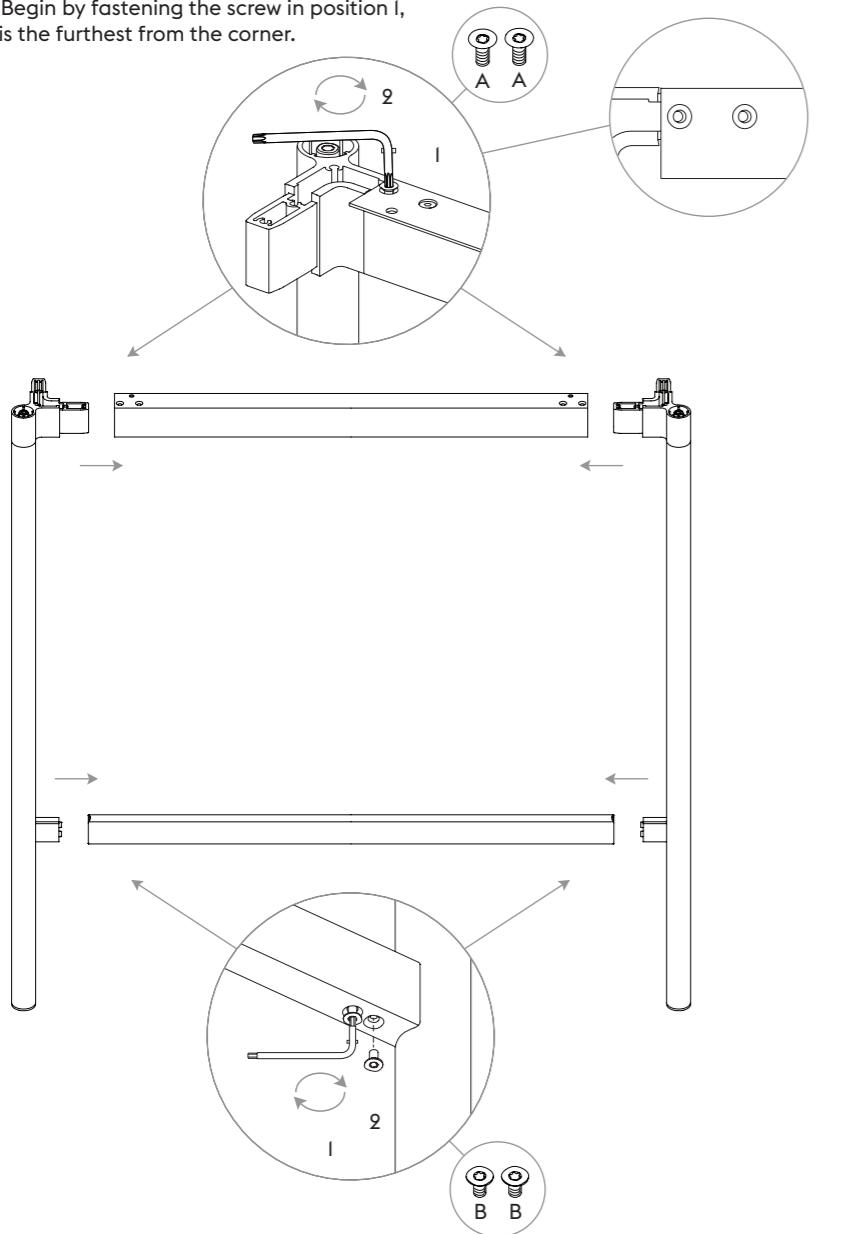

- 3 To fasten the screws, use a power tool or the torx key.

